 
 

 
 
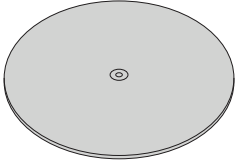 
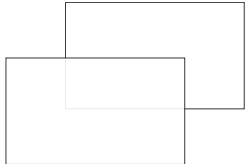 
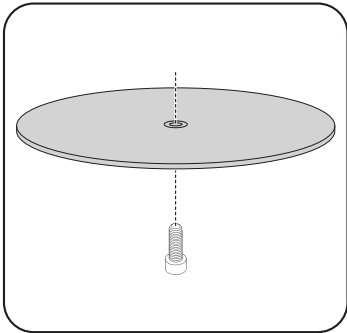 


ASSEMBLY INSTRUCTIONS

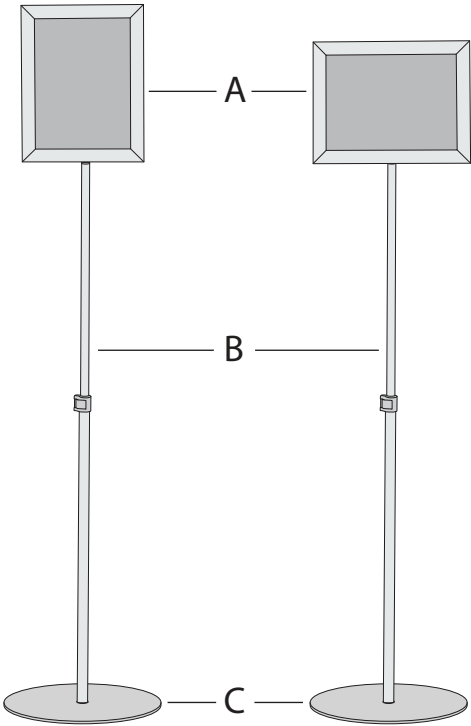


COMPONENTS:


A  1 PC	B  1 PC	D  1 PC	E  1 Hex Key
C  1 PC		Protective Cover  2 PC	

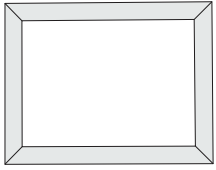


1 To attach the telescopic pole to the base, insert screw from the bottom of the base.

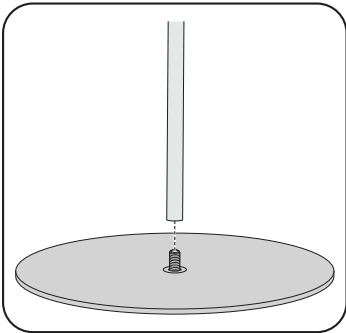


2 Holding the head of the screw with one hand, twist the telescopic pole clockwise onto the screw with the other hand.

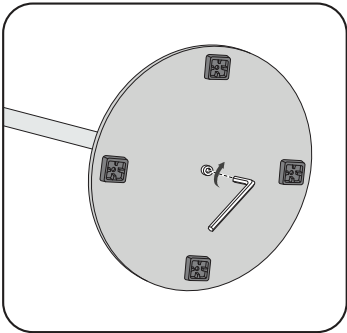


3 Use the hex key to tighten the screw while holding the pole to prevent it from spinning with the other hand.

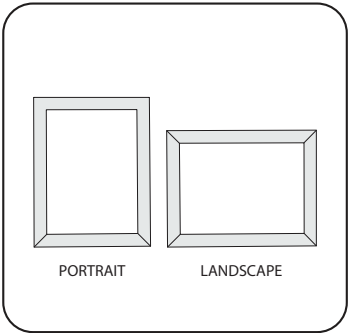


4 Choose to display in portrait or landscape orientation.

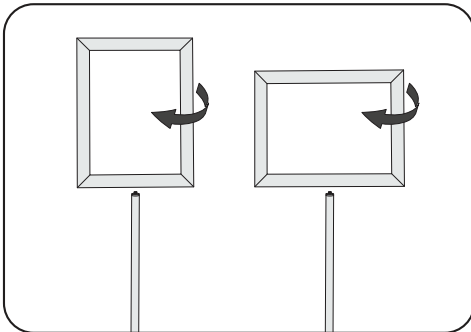

5 Twist poster frame into place turning clockwise.

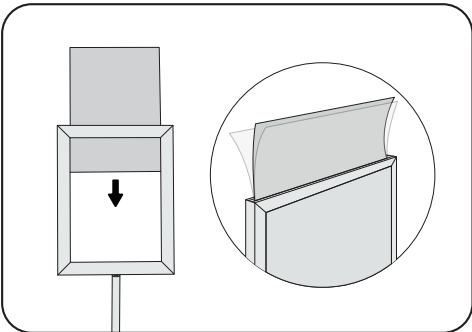

6 Insert graphic(s) with poster cover at the front and back.

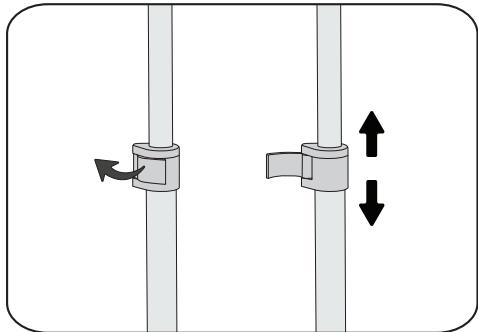

7 Release the lock and adjust the telescopic pole to the desired height, then clamp shut.