
## **ASSEMBLY INSTRUCTIONS**

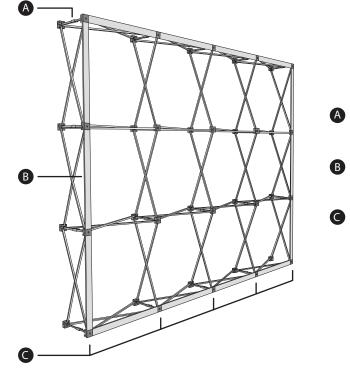

CONNECTORS  $7\frac{1}{2}$  ft Wide = 16 connectors 10 ft Wide = 20 connectors

HOOK & LOOP Hook pre-attached to frame Loop sewn onto graphic



## $\bigcirc$ IMPORTANT $\bigcirc$


Ensure **ALL** connectors are completely detached before collapsing the frame.


Failure to ensure **ALL** connectors are completely detached before collapsing the frame will result in permanent damage to the frame.




CONNECTED


DISCONNECTED

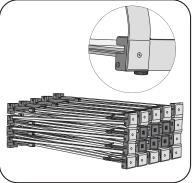

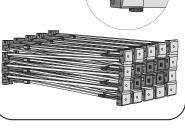

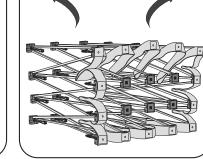


Grip the aluminum bars and 2 pull apart to open the frame.

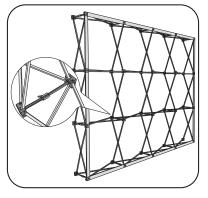

Click together ALL connectors.


3

- $7\frac{1}{2}$  ft Wide = 16 connectors
- 10 ft Wide = 20 connectors

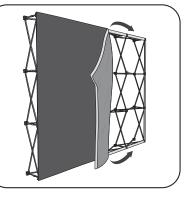

Starting at one side, attach the graphic. Pull graphic taut as you work your way from one side to the other. Reposition graphic as needed to remove any creases or wrinkles.

4

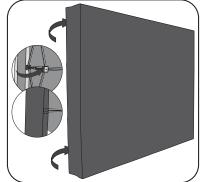

If the graphic has printed end 5 caps: pull the end caps around the side of the frame and secure at the back.

Remove hardware from carry case. Lay hardware parallel to the floor with the adjustable feet at the bottom.