
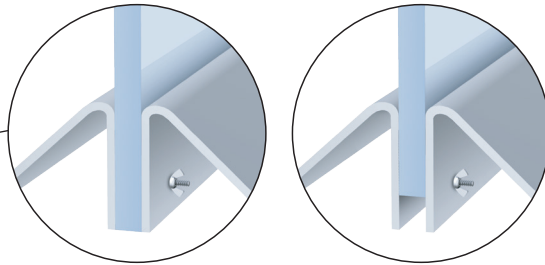
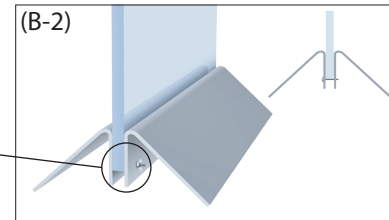
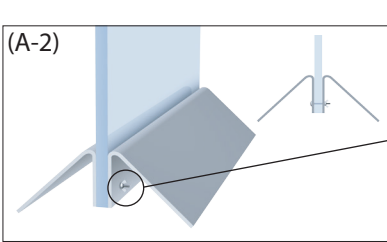
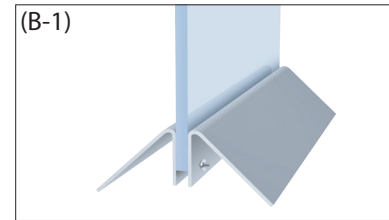


Smart Wedge

1. (If using graphic with holes) Sandwich graphic in between sign base (A-1) and screw together with wingnuts and carriage bolts (fig. A-2).
2. (If using graphic without holes) Screw sign base (B-1) together with wingnuts and carriage bolts and rest graphic on top of screws (fig. B-2).

NOTE: Base covers approximately 3" of the bottom portion of the graphic. Base holds any rigid substrate up to 1" thick (as long as the substrate can hold its own weight).

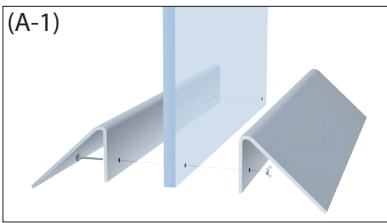

Hole Spacings for graphic

